



Product Information

DATE: 25.June.2010

SAMSUNG TFT-LCD

MODEL: LTI460HM01

<u>The Information Described in this Specification is Preliminary and can be changed without prior notice</u>

APPROVED BY	DATE	PREPARED BY	DATE
Je-Hwan Oh	25.June.2010	Young-Do Choi	25.June.2010

Application Engineering Part 3, LCD Division Samsung Electronics Co., LTD.

MODEL LTI460HM01 Doc. No 05-000-G-100625 Page 1 / 27
--



		Co	ontents	Samsung Con	fidential
Revision I	History				(3)
General D	Description				(4)
General I	nformation				(4)
1. Absolut	te Maximum Ratings				(5)
2. Applica	tion information for D	D (Digital In	formation Display)		(6)
3. Optical	Characteristics				(7)
4.1 TF7 4.2 Bac	cal Characteristics Γ LCD Module ck Light Unit erter Input & Specifica				(10)
5.1 LVE 5.2 Inve 5.3 Inve 5.4 LVE	OS Connector erter Input Pin Configuerter Input Power Seq OS Interface	uration uence	nd Gray Scale of Each		(13)
6.1 Tim 6.2 Tim	ce Timing ning Parameters (DE on ning Diagrams of interwer on/OFF Sequence	only mode) face Signal (DE only mode)		(18)
7. Outline	Dimension				(21)
8. Packing	g				(23)
9. Marking	g & Others				(24)
10.1 Ha 10.2 St 10.3 O _l	andling orage peration peration Condition Gu				(25)
MODEL	LTI460HM01	Doc. No	05-000-G-10062	25 Page	2 / 27



* Revision History

Date	Rev. No	Page	Summary
June 25, 2010	000	all	First issued

MODEL LTI460HM01 Doc. No 05-000-G-100625 Page 3 / 27



General Description

Samsung Confidential

Description

LTI460HM01 is a color active matrix liquid crystal display (LCD) that uses amorphous silicon TFT(Thin Film Transistor) as switching components. This model is composed of a TFT LCD panel, a driver circuit and a backlight unit. The resolution of a 46.0" is 1920 x 1080 and this model can display up to 16.7 million colors with wide viewing angle of 89° or higher in all directions. This panel is intended to support applications to provide a excellent performance for Flat Panel Display such as Home-alone Multimedia TFT-LCD TV, Display terminals for AV application products, and Digital Information Display (DID).

Features

- RoHS compliance (Pb-free)
- High contrast ratio, High luminance
- SPVA(Super Patterned Vertical Align) mode
- Wide viewing angle (±178°)
- High speed response
- Landscape / Portrait type compatible
- FHD(1920 x 1080 pixels) resolution (16:9)
- Low power consumption
- Direct Type 12 CCFTs(Cold Cathode Fluorescent Tube)
- DE(Data Enable) mode
- LVDS (Low Voltage Differential Signaling) interface (2pixel/clock)

General Information

Items	Specification	Unit	Note
Module Size	1083(W _{TYP}) x 627(H _{TYP})	- mm	± 1.0 mm
Module Size	59.0(DTYP)		± 1.0 mm
Weight	11.500	g	
Pixel Pitch	0.53025(H) x 0.53025(V)	mm	
Active Display Area	1018.08(H) x 572.67(V)	mm	
Surface Treatment	Haze 44%, Hard-coating (3H)		
Display Colors	8 bit - 16.7M	colors	
Number of Pixels	1920 x 1080	pixel	
Pixel Arrangement	RGB vertical stripe		
Display Mode	Normally Black		
Luminance of White	450 (Typ.)	cd/m ²	

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	4 / 27
-------	------------	---------	-----------------	------	--------

1. Absolute Maximum Ratings

If the condition exceeds maximum ratings, it can cause malfunction or unrecoverable damage to the device.

Item		Symbol		Min.	Max.	Unit	Note
Power Supply Voltage		V _{DD}		GND-0.5	13.2	V	(1)
Storage temperature		T _{STG}		-20	60	°C	(2)
Glass surface Center		T _{CENTER}		0	50	°C	(2) (5)
temperature (Operation)	T.Uniformity	Δ	T	-	10	C	(2),(5)
Shock (Non-operating)		Q	x,y	-	40	G	(3)
		S _{nop}	Z	-	30	G	(3)
Vibration (Non-operating)		V	nop		1.5	G	(4)

Note (1) Ta= 25 \pm 2 °C

- (2) Temperature and relative humidity range are shown in the figure below.
 - a. 90 % RH Max. (Ta ≤ 39 °C)
 - b. Relative Humidity is 90% or less. (Ta > 39 °C)
 - c. No condensation
- (3) 11ms, Sine wave, one time for $\pm X$, $\pm Y$, $\pm Z$ axis
- (4) 10-300Hz, Sweep rate 10min, 30min for X,Y,Z axis

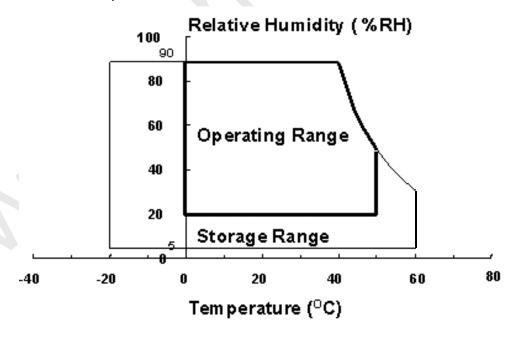


Fig. Temperature and Relative humidity range


MODEL LTI4	460HM01 Doc. No	05-000-G-100625	Page	5 / 27
------------	-----------------	-----------------	------	--------



(5) Definition of test point

Global LCD Panel Exchange Center

Samsung Confidential

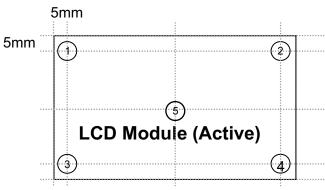

 $\triangle T$ should be less than 10 °C ($\triangle T = |T_{CENTER} - T_{CORNER}|$)

T_{CENTER}: Temperature of the center of the glass surface (Test point 5) T_{CORNER}: Temperature of each edge of the glass surface (Test point 1~4)

2. Application information for DID (Digital Information Display)

A long-term display like DID application may cause uneven display including image retention. To optimize module's lifetime and function, several operating usages are required.

- 1. Normal operating condition
 - Temperature: 20 ± 15 °C
 - Humidity: 55 \pm 20 %
- Display pattern: moving picture or regular switchover display

Note) Long-term static information image may cause uneven display.

- 2. Operating usages under abnormal operating condition. Note (1)
 - a. Ambient condition
 - Well-ventilated place is recommended to set up DID system.
 - b. Power off and screen saver
 - Periodical power-off or screen saver is needed after long-term static display. Note (2)
- 3. Operating usages to protect uneven display due to long-term static information display
- a. Suitable operating time for B-DID: under 12 hours a day.
- b. Periodical display contents change from static image to moving picture.
- Liquid crystal refresh time is required.
- c. Periodical background color and character (image) color change
- Use different colors for background and character (image), respectively.
- Change colors periodically.
- d. Avoid combination of background and character with large different luminance.

Note (1) Abnormal condition means every operating condition except normal operating condition.

Note (2) Moving picture or black pattern is strongly recommended for screen saver.

4. Lifetime in this spec is guaranteed only when DID is used under right operating usages.

MODEL LTI460HM01 Doc. No	05-000-G-100625	Page	6 / 27
--------------------------	-----------------	------	--------



3. Optical Characteristics

Samsung Confidential

The optical characteristics should be measured in a dark room or equivalent. Measuring equipment: TOPCON BM-7,SPECTRORADIOMETER SR-3

(Ta = 25
$$\pm$$
 2°C, V_{DD} = 12V, f_V = 60Hz, f_{DCLK} = 148.5MHz, I_L = 14.0 mArms)

		(1a 20 ±	O, v _{DD} - 1	20,10	or iz, iDCLK	1 10.01111	12, 1	1.0 1117 (11110)
Item		Symbol	Condition	Min.	Тур.	Max.	Unit	Note
Contrast I (Center of s		C/R		2000	3000	-		(3) SR-3
	Rising	Tr		-	20	-		
Response Time	Falling	Tf		-	6	10	msec	(5) BM-7
711110	G-to-G	Tg		-	8	-		DIVI 7
Luminance of (Center of s		Y _L	Normal θ L,R =0	400	450	- (cd/m ²	(6) SR-3
	Red	Rx	$\theta \mathbf{U}, \mathbf{D} = 0$		0.640			
	Red	Ry	Viewing		0.330			
Color Green Gy	Gx	Angle		0.300				
	Gy		TYP.	0.600	TYP.		(7),(8)	
	Bx		-0.03	0.150	+0.03		SR-3	
,	Diue	Ву			0.060			
) A (1-2)	Wx			0.280				
	White	Wy			0.290			
Color Ga	mut	-		-	72	-	%	(7) SR-3
Color Temp	erature	-		-	10000	-	К	(7) SR-3
	Hor.	θ_{L}		75	89	-		
Viewing	HUI.	θ_{R}	C/R≥10	75	89	-	Dograd	(8)
Angle	Ver.	$\theta_{\sf U}$	C/R210	75	89	-	Degree	SR-3
	vei.	θ_{D}		75	89	-		
Brightness U (9 Poin		B _{uni}		-	-	25	%	(4) SR-3


Note (1) Test Equipment Setup

The measurement should be executed in a stable, windless and dark room between 40min and 60min after lighting the backlight at the given temperature for stabilization of the backlight. This should be measured in the center of screen.


Single lamp current: 14.0 mA

Environment condition : Ta = 25 \pm 2 °C

MODEL LTI460HM01 Doc. No 05-000-G-100625 Page 7 / 27
--

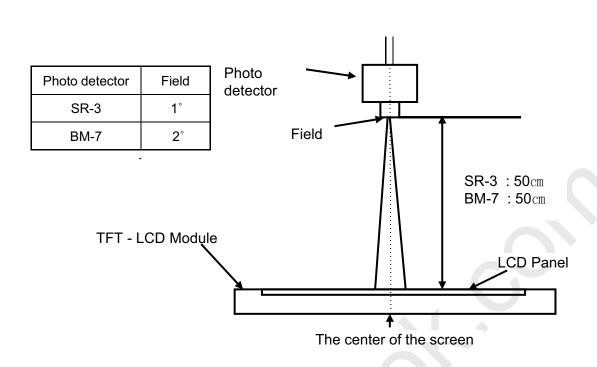

Note (2) Definition of test point

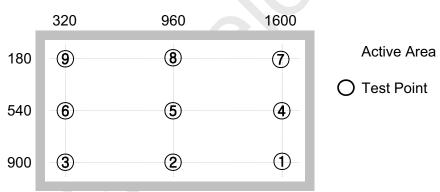

Note (3) Definition of Contrast Ratio (C/R)

: Ratio of gray max (Gmax) & gray min (Gmin) at the center point ⑤ of the panel

$$C/R = \frac{G \max}{G \min}$$

Gmax: Luminance with all pixels white Gmin: Luminance with all pixels black

MODEL LTI460HM01	Doc. No	05-000-G-100625	Page	8 / 27
------------------	---------	-----------------	------	--------




Note (4) Definition of 9 points brightness uniformity

$$Buni = 100*\frac{(B \max - B \min)}{B \max}$$

Global LCD Panel Exchange Center

Bmax: Maximum brightness Bmin: Minimum brightness


Note (5) Definition of Response time: Sum of Tr, Tf

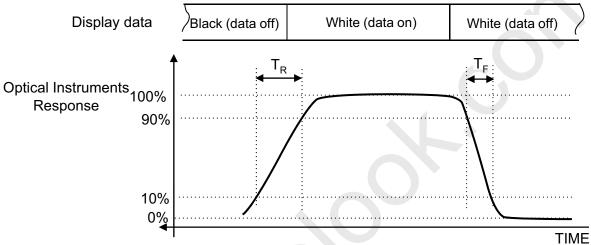

Note (6) Definition of Luminance of White: Luminance of white at center point (5)

Note (7) Definition of Color Chromaticity (CIE 1931) Color coordinate of Red, Green, Blue & White at center point ⑤

Note (8) Definition of Viewing Angle : Viewing angle range (C/R ≥ 10)

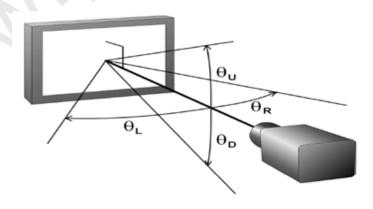

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	9 / 27
-------	------------	---------	-----------------	------	--------

4. Electrical Characteristics

4.1 TFT LCD Module

Global LCD Panel Exchange Center

The connector for display data & timing signal should be connected.

Ta = 25° C \pm 2 $^{\circ}$ C

Item		Symbol	Min.	Тур.	Max.	Unit	Note
Voltage of Power Supply		V_{DD}	10.8	12.0	13.2	V	(1)
Current	(a) Black		-	800	-	mA	
of Power	(b) White	I _{DD}	-	1400	-	mA	(2),(3)
Supply	(c) N-Pattern		-	1400	1600	mA	
Vsync Frequency		f _V	-	60.0		Hz	
Hsync Fre	Hsync Frequency		48	67.5	72	kHz	
Main Frequency		f _{DCLK}	130.0	148.5	160	MHz	
Rush Curr	ent	I _{RUSH}	-	-	3.0	Α	(4)

Note (1) The ripple voltage should be controlled under 10% of V_{DD} .


- (2) $f_V = 60$ Hz, $f_{DCLK} = 148.5$ MHz, $V_{DD} = 12.0$ V, DC Current.
- (3) Power dissipation check pattern (LCD Module only)












(4) Measurement Conditions

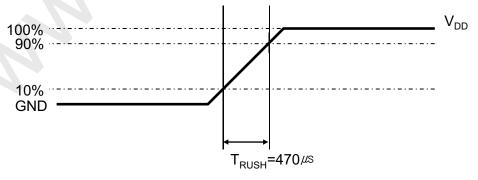

Rush Current I_{RUSH} can be measured when T_{RUSH} . is 470 μ S.

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	10 / 27
-------	------------	---------	-----------------	------	---------




4.2 Back Light Unit

The backlight unit contains 12 direct-lighting type CCFTs (Cold Cathode Fluorescent Tube). The characteristics of lamps are shown in the following tables.

Ta=25 \pm 2°C

Item	Symbol	Min.	Тур.	Max.	Unit	Note
Lamp Current	IL	11.0	14.0	15.0	mArms	
Lamp Voltage	V _L	995 ± 7% (IL : 11mA) 950 ± 7% (IL : 14mA) 935 ± 7% (IL : 15mA)			Vrms	
Operating Life Time	Hr	50,000	-	>	Hour	(1)

Note (1) It is defined as the time to take until the brightness reduces to 50% of its original value. [Operating condition : $Ta = 25\pm2^{\circ}C$, IL = 14.0 mArms, For single lamp only]

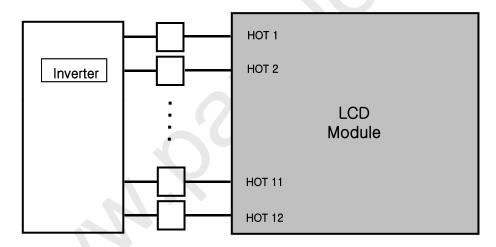

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	11 / 27



4.3 Inverter Input Condition & Specification

Itomo	Symbol	Conditions	Specifications			Unit	Note	
Items	Symbol	Conditions	Min.	Тур.	Max.	Offic	Note	
Input Voltage	Vin	-	21.6	24	26.4	V	Ta=25 ±2 °C	
Input Current	lin	Vin = 24.0V Vdim = 3.3V	-	-	9.09	Adc	Initial turn on	
Lamp Current	I _{O,MAX}	Vdim = 3.3V	13.3	14.0	14.7	mArms	After 1 hour	
Frequency	F _{LAMP}	Vin = 24.0V	42	43.5	45	kHz	Warm-up	
Backlight	ON	Vin = 24.0V	2.4	-	5.25	V		
On/Off	OFF	Vin = 24.0V	-0.3	-	0.8	V	-	
Dimming	\/	Max. Lum.	3.3		<u> </u>	V		
Control	V_{DIM}	Min. Lum.	-	(-)	0	V	-	

Note (1) Power Consumption is measured at 450[cd/m2] of luminance condition which is the typical luminance value. Lamp Current is measured at the point before Lamp.

Additional Appendix for supply current

Items	Symbol Conditions		S	Unit		
items Symbol		Conditions	Min.	Тур.	Max.	Offic
Input Current	IN_overshoot	V _{IN} =24V, DIM=3.3V (Within 1hr at BLU ON)	-	7.78	8.30	۸۵۵
	IN_saturation	V _{IN} =24V, DIM=3.3V (After 1hr Aging)	-	6.75	7.20	Adc

		1		T .	
MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	12 / 27



5. Input Terminal Pin Assignment

1 Input Signal & Power

5.1 Input Signal & Power			Connector : FI-RE51S-HF (JAE)			
PIN No.	Description		PIN No.	Desc	ription	
1	Vdd ((12V)	26		RE[0]P	
2	Vdd ((12V)	27		RE[1]N	
3	Vdd ((12V)	28		RE[1]P	
4	Vdd ((12V)	29		RE[2]N	
5	Vdd ((12V)	30	Even	RE[2]P	
6	No Con	nection	31	LVDS	GND	
7	G1	ND	32	Signal	RECLK-	
8	G1	ND	33		RECLK+	
9	GI	ND	34		GND	
10		RO[0]N	35		RE[3]N	
11		RO[0]P	36		RE[3]P	
12		RO[1]N	37	No Cor	nection	
13		RO[1]P	38	No Cor	nection	
14		RO[2]N	39	GI	ND	
15	Odd LVDS	RO[2]P	40	No Cor	nection	
16	Signal	GND	41	No Cor	nection	
17		ROCLK-	42	No Cor	nection	
18		ROCLK+	43	No Cor	nection	
19		GND	44	No Cor	nection	
20		RO[3]N	45	LVDS	Option	
21	4	RO[3]P	46	No Cor	nection	
22	No Con	nection	47	No Cor	nection	
23	No Con	nection	48	No Cor	nection	
24	GN	ND .	49	No Cor	nection	
25	Even LVDS	RE[0]N	50	No Cor	nection	
			51	No Cor	nection	

Note(1) No Connection :These pins are only used for SAMSUNG internal purpose.


(2) LVDS Option : High (3.3V) → Normal LVDS format

: Low (GND) or Open (N.C) \rightarrow JEIDA LVDS format

Sequence :On = VDD ≥ LVDS Option ≥ Interface Signal Off = Interface Signal ≥ LVDS Option ≥ VDD

MODEL LTI460HM01 Doc. No 05-000-G-100625 Page 13 / 27



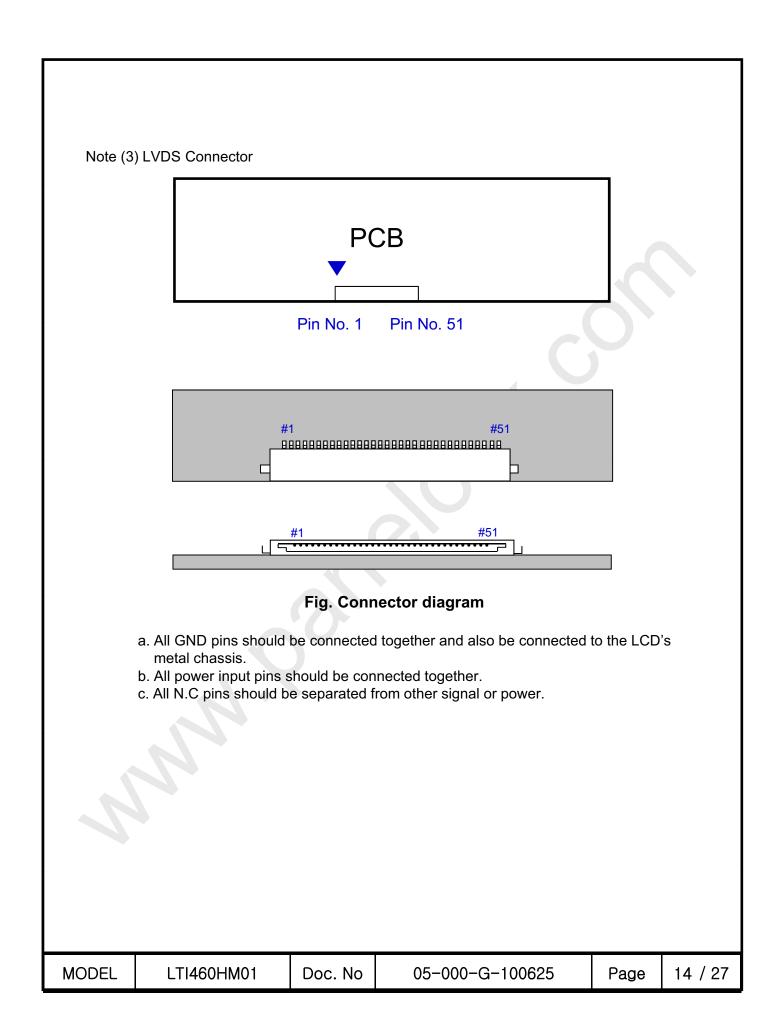




5.2 Inverter Input Pin Configuration

Connector: YEON HO, 20022WR-14B1

Pin No.	Pin Configuration(FUNCTION)
1	Vin (24V)
2	Vin (24V)
3	Vin (24V)
4	Vin (24V)
5	Vin (24V)
6	GND
7	GND
8	GND
9	GND
10	GND
11	No Connection
12	Backlight On /Off [On: 2.4 ~ 5.25V, Off: 0 ~ 0.8V]
13	Dimming Control [0V: Min, 3.3V: Max]
14	No Connection

5.3 Inverter Input Power Sequence

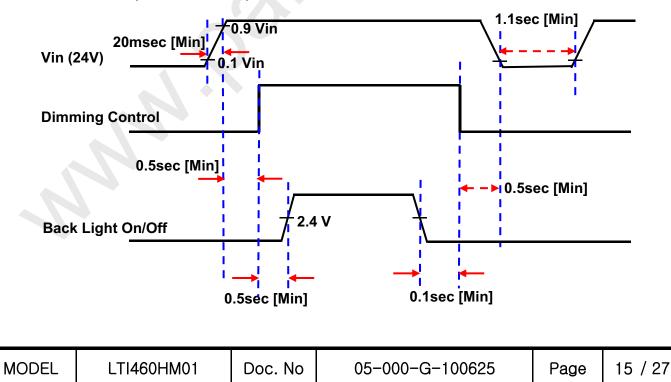



5.4 LVDS Interface

Samsung Confidential

- LVDS Receiver : Tcon (merged)

	a Format (JEIDA	` ,		Default LVI	OS Option : J	EIDA
		LVDS pin		JEIDA -DATA	VESA -D	ATA
		TxIN/RxOU	Γ0	R2	R0	
	TxOUT/RxIN1 TxOUT/RxIN2	TxIN/RxOU	Γ1	R3	R1	
		TxIN/RxOU	Γ2	R4	R2	
Tx	OUT/RxIN0	TxIN/RxOU	Г3	R5	R3	
		TxIN/RxOU	Γ4	R6	R4	
		TxIN/RxOU	Г6	R7	R5	
		TxIN/RxOU	Γ7	G2	G0	
		TxIN/RxOU	Г8	G3	G1	
		TxIN/RxOU	Г9	G4	G2	
		TxIN/RxOUT	12	G5	G3	
Tx	OUT/RxIN1	TxIN/RxOUT	13	G6	G4	
		TxIN/RxOUT	14	G7	G5	
	TxOUT/RxIN2 TxOUT/RxIN3	TxIN/RxOUT	15	B2	В0	
		TxIN/RxOUT	18	В3	B1	
		TxIN/RxOUT19		B4	B2	
		TxIN/RxOUT	20	B5	В3	
		TxIN/RxOUT	21	B6	B4	
Tx	OUT/RxIN2	TxIN/RxOUT	22	B7	B5	
		TxIN/RxOUT	24	HSYNC	HSYN	С
	· N	TxIN/RxOUT	25	VSYNC	VSYN	С
		TxIN/RxOUT	26	DEN	DEN	
		TxIN/RxOUT	27	R0	R6	
		TxIN/RxOU	Г5	R1	R7	
		TxIN/RxOUT	10	G0	G6	
Tx	OUT/RxIN3	TxIN/RxOUT	11	G1	G7	
		TxIN/RxOUT	16	В0	B6	
		TxIN/RxOUT	17	B1	B7	
		TxIN/RxOUT	23	RESERVED	RESER	/ED
MODEL	LTI460HM01	Doc. No	05	-000-G-100625	Page	16 / 2



5.5 Input Signals, Basic Display Colors and Gray Scale of Each Color

												D	ATA S	SIGN	ΑL											GRAY
COLOR	DISPLAY (8bit)				RE	ΕD							GRI	EEN							BL	UE				SCALE
	, ,	R0	R1	R2	R3	R4	R5	R6	R7	G0	G1	G2	G3	G4	G5	G6	G7	ВО	B1	B2	В3	B4	B5	В6	В7	LEVEL
	BLACK	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-
	BLUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	-
	GREEN	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	-
BASIC	CYAN	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	_
COLOR	RED	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-
	MAGENTA	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	-
	YELLOW	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	-
	WHITE	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	-
	BLACK	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R0
		1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R1
GRAY SCALE OF RED ↓ LIGHT		0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R2
	Ť	:	:	:	:	:	:			:	:	:	:	:	:			:	:	:	:	:	:			R3~
	\downarrow	:	:	:	:	:	:			:	:	:	:	:	÷			/ :	:	:	:	:	:			R252
	LIGHT	1	0	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R253
		0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R254
	RED	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	R255
	BLACK	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	G0
		0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	G1
GRAY	DARK	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	G2
SCALE	1	:	:	:	:	:	:			:	:	:	:	:	:			:	:	:	:	:	:			G3~
OF GREEN	\downarrow	:	:	:	:					7.	:	:	:	:	:			:	:	:	:	:	:			G252
	LIGHT	0	0	0	0	0	0	0	0	1	0	1	1	1	1	1	1	0	0	0	0	0	0	0	0	G253
		0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	G254
	GREEN	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	G255
	BLACK	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	В0
		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	B1
GRAY	DARK	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	B2
SCALE	1			:	:	:	:			:	:	:	:	:	:			:	:	:	:	:	:			B3~
OF BLUE	1		:	:	:	:	:			:	:	:	:	:	:			:	:	:	:	:	:			B252
	LIGHT	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	1	1	1	1	1	1	B253
		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	B254
	BLUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	B255

Note) Definition of Gray:

Rn: Red Gray, Gn: Green Gray, Bn: Blue Gray (n = Gray level)

Input Signal: 0 = Low level voltage, 1 = High level voltage

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	17 / 27	
-------	------------	---------	-----------------	------	---------	--



6. Interface Timing


6.1 Timing Parameters (DE only mode)

Signal	Item	Symbol	Min.	Тур.	Max.	Unit	Note
Clock		1/T _C	130	148.5	160	MHz	-
Hsync	Frequency	F _H	48.0	67.5	75.0	KHz	-
Vsync		F _V	45	60	65	Hz	-
Vertical Display Term	Active Display Period	T _{VD}	-	1080	-	Lines	1
	Vertical Total	T _V	1092	1125	1158	Lines	-
Horizontal Display Term	Active Display Period	T _{HD}	-	1920	-	Clocks	-
	Horizontal Total	T _H	2090	2200	2350	Clocks	-

Note) This product is DE only mode. The input of Hsync & Vsync signal does not have an effect on normal operation.


Test Point: TTL control signal and CLK at LVDS Tx input terminal in system

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	18 / 27

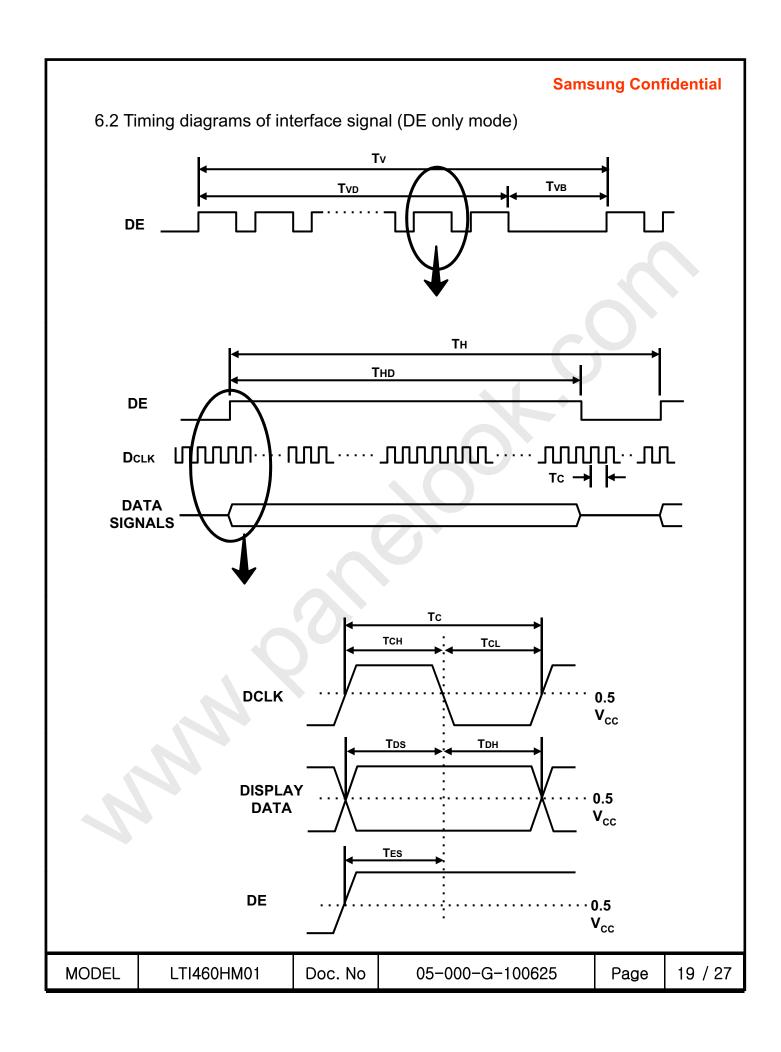

6.3 Power ON/OFF Sequence

To prevent a latch-up or DC operation of the LCD Module, the power on/off sequence should be as the diagram below.

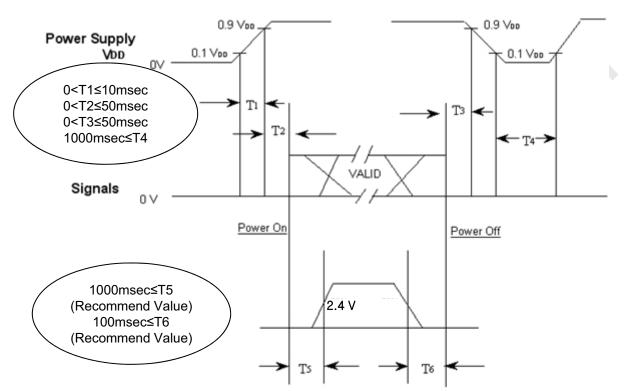


- T1: V_{DD} rising time from 10% to 90%
- T2 : The time from V_{DD} to valid data at power ON.
- T3 : The time from valid data off to V_{DD} off at power Off.
- T4: V_{DD} off time for Windows restart
- T5: The time from valid data to B/L enable at power ON.
- T6: The time from valid data off to B/L disable at power Off.
- The supply voltage of the external system for the Module input should be the same as the definition of V_{DD}.
- Apply the lamp voltage within the LCD operation range. When the backlight turns on before the LCD operation or the LCD turns off before the backlight turns off, the display may momentarily show abnormal screen.
- In case of V_{DD} = off level, please keep the level of input signals low or keep a high impedance.
- T4 should be measured after the Module has been fully discharged between power off and on period.
- Interface signal should not be kept at high impedance when the power is on.

MODEL LTI460HM01 Doc	No 05-000-G-100625	Page	20 / 27
----------------------	--------------------	------	---------

(1)

屏庫:全球液晶屏交易中心

7. Outline Dimension (Front View)

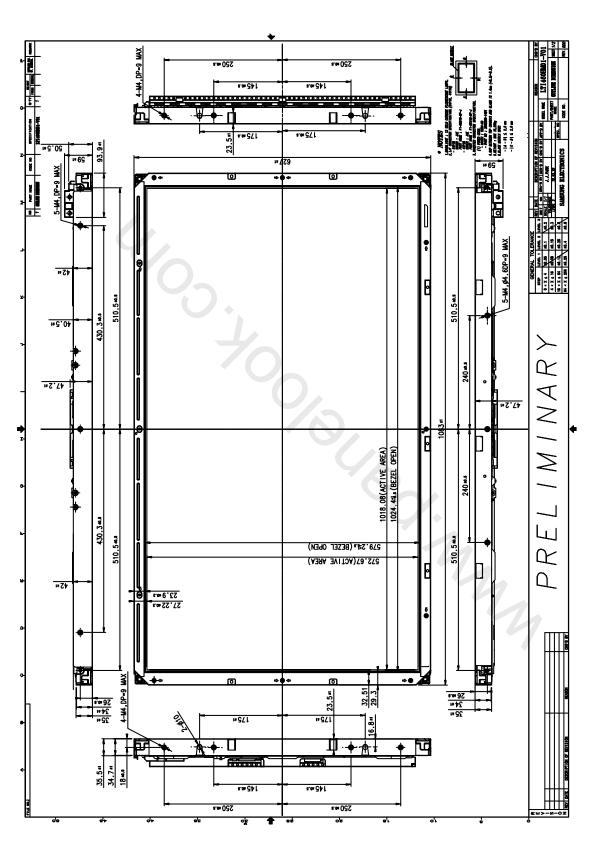

LTI460HM01

Model


2 Doc.

05-000-G-100625

Page

27 21 (1)

Samsung Confidential

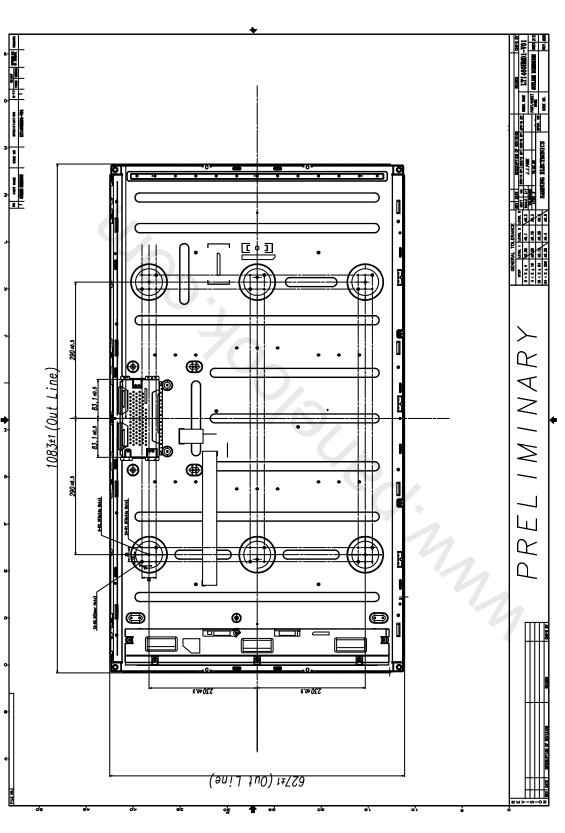

Model

LTI460HM01

Doc.

2

05-000-G-100625


Page

27 22



8. PACKING

- 8.1 CARTON (Internal Package)
- (1) Packing Form
 Corrugated fiberboard box and corrugated cardboard as shock absorber
- (2) Packing Method

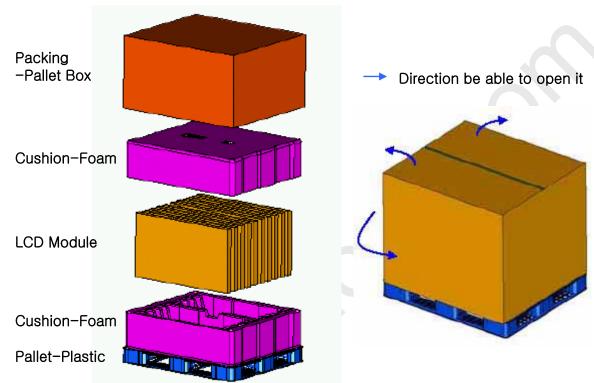

8.2 Packing Specification


Item	Specification	Remark
LCD Packing	10ea / (Packing- Pallet Box)	1. 115 Kg / LCD (10ea) 2. 10 Kg / Cushion-pallet (2ea) 3. 8 Kg / Packing-Pallet Box (1ea) 4. Cushion-pallet Material : EPS 5. Packing-Pallet Box Material : DW4
Pallet	1Box / Pallet	1. Pallet weight = 8.8kg
Packing Direction	Vertical	
Total Pallet Size	H x V x height	1270mm(H) x 1150mm(V) x 844mm(height)
Total Pallet Weight	141.8 kg	Pallet(8.8kg) + Module(115 kg) + Cushion(10kg) + Pallet-BOX(8kg)

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	23 / 27
-------	------------	---------	-----------------	------	---------


9. MARKING & OTHERS

A nameplate bearing followed by is affixed to a shipped product at the specified location on each product.


(1) Part number: LTI460HM01 (2) Revision: Three letters

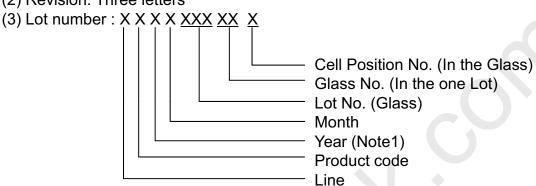

(4) Nameplate Indication

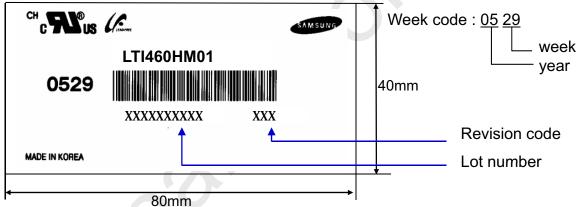

(5) Packing box attach

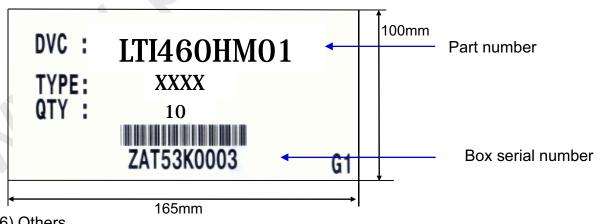

(6) Others

1. After service part Lamps cannot be replaced because of the narrow bezel structure.

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	24 / 27



10. General Precautions

Samsung Confidential

10.1 Handling

- (a) When the Module is assembled, it should be attached to the system firmly using all mounting holes. Be careful not to twist and bend the Module.
- (b) Because the inverter use high voltage, it should be disconnected from power before it is assembled or disassembled.
- (c) Refrain from strong mechanical shock and / or any force to the Module. In addition to damage, this may cause improper operation or damage to the Module and CCFT backlight.
- (d) Note that polarizers are very fragile and could be damage easily.

 Do not press or scratch the surface harder than a HB pencil lead.
- (e) Wipe off water droplets or oil immediately. If you leave the droplets for a long time, staining or discoloration may occur.
- (f) If the surface of the polarizer is dirty, clean it using absorbent cotton or soft cloth.
- (g) Desirable cleaners are water, IPA(Isopropyl Alcohol) or Hexane. Do not use Ketone type materials(ex. Acetone), Ethyl alcohol, Toluene, Ethyl acid or Methyl chloride. It might permanent damage to the polarizer due to chemical reaction.
- (h) If the liquid crystal material leaks from the panel, it should be kept away from the eyes or mouth. In case of contact with hands, legs or clothes, it must be washed away with soap thoroughly.
- (i) Protect the Module from static, or the CMOS Gate Array IC would be damaged.
- (j) Use finger-stalls with soft gloves in order to keep display clean during the incoming inspection and assembly process.
- (k) Do not disassemble the Module.
- (I) Do not adjust the variable resistor located on the Module.
- (m) Protection film for polarizer on the Module should be slowly peeled off just before use so that the electrostatic charge can be minimized.
- (n) Pins of I/F connector should not be touched directly with bare hands.

MODEL LTI460HM01 Doc. No	05-000-G-100625	Page	25 / 27
--------------------------	-----------------	------	---------



10.2 Storage

- (a) Do not leave the Module in high temperature, and high humidity for a long time. It is highly recommended to store the Module with temperature from 0 to $35\,^{\circ}$ C and relative humidity of less than 70%.
- (b) Do not store the TFT-LCD Module in direct sunlight.
- (c) The Module should be stored in a dark place. It is prohibited to apply sunlight or fluorescent light in storing.

10.3 Operation

- (a) Do not connect or disconnect the Module in the "Power On" condition.
- (b) Power supply should always be turned on/off by the "Power on/off sequence"
- (c) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference should be done by system manufacturers.

 Grounding and shielding methods may be important to minimize the interference.
- (d) The cable between the backlight connector and its inverter power supply should be connected directly with a minimized length. A longer cable between the backlight and the inverter may cause lower luminance of lamp(CCFT) and may require higher startup voltage(Vs).

10.4 Operation Condition Guide

(a) The LCD product should be operated under normal conditions. Normal condition is defined as below;

- Temperature : 20±15℃ - Humidity : 55±20%

- Display pattern : continually changing pattern (Not stationary)

(b) If the product will be used in extreme conditions such as high temperature, humidity, display patterns or operation time etc.., It is strongly recommended to contact SEC for Application engineering advice. Otherwise, its reliability and function may not be guaranteed. Extreme conditions are commonly found at Airports, Transit Stations, Banks, Stock market, and Controlling systems.

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	26 / 27	
-------	------------	---------	-----------------	------	---------	--



10.5 Others

Samsung Confidential

- (a) Ultra-violet ray filter is necessary for outdoor operation.
- (b) Module should be turned clockwise (regular front view perspective) when used in portrait mode
- (c) Avoid condensation of water. It may result in improper operation or disconnection of electrode.
- (d) Do not exceed the absolute maximum rating value. (supply voltage variation, input voltage variation, variation in part contents and environmental temperature, and so on)
 - Otherwise the Module may be damaged.
- (e) If the Module keeps displaying the same pattern for a long period of time, the image may be "sticked" to the screen. To avoid image sticking, it is recommended to use a screen saver.
- (f) This Module has its circuitry PCB's on the rear side and should be handled carefully in order not to be stressed.
- (g) Please contact SEC in advance when you display the same pattern for a long time.

MODEL	LTI460HM01	Doc. No	05-000-G-100625	Page	27 / 27